GB **DWF 407W**

Quick Reference Guide

for IKEA® from Whirlpool®

Further indications are given in the pages to follow and in the user instructions (we reserve the right to make technical modifications).

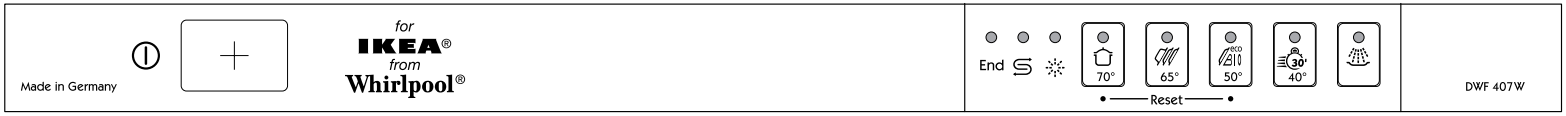

On/Off

Programme end

Salt level indicator
Add regeneration salt; only add regeneration salt immediately before starting a wash programme.

Rinse aid level indicator
Add rinse aid.

Reset Buttons
Press the programme buttons simultaneously to change the selected programme.

Programme Symbol and Temperature	Programme selection and recommended load type	Consumption [1]		
		L	kWh	min.
Intensive 70°C	Heavily soiled crockery with dried-on food. Especially suitable for pans and saucepans.	20	1.50	100
Normal 65°C	Normally or heavily soiled crockery, with dried-on food.	20	1.30	98
Bio-Normal 50°C [2]	Normally or lightly soiled crockery, with dried-on food.	12	0.88	92
Rapid 40°C	Lightly soiled crockery, with no dried-on food.	12	0.60	24
Pre-wash	Crockery to be washed later.	5	0.12	13

1) Values may vary in relation to usage, e.g.: different loads, water temperatures - above or below 15°C - as well as water hardness and power supply voltage, etc.
2) Reference programme for energy label.
Values are measured in laboratory in accordance with the European Standard EN 50242.

Ikea is a registered trademark
5019 696 92504
copyright 2000

Upper and lower rack

Upper rack

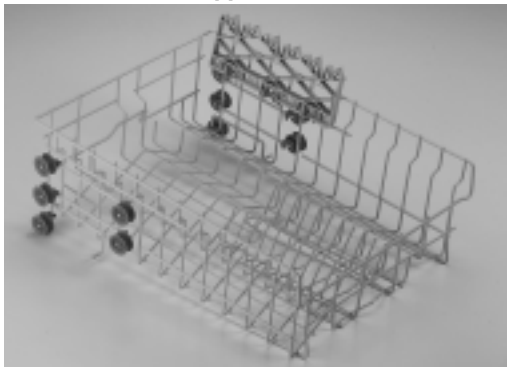

Rack height adjustment:
The rack can be raised or lowered by positioning it on the top or bottom roller guides, should it be necessary to create more space in the top or bottom rack to allow loading of large pieces of crockery.

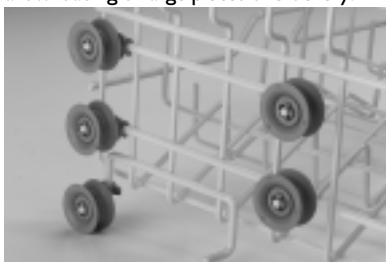

Crockery holders:

Lower rack

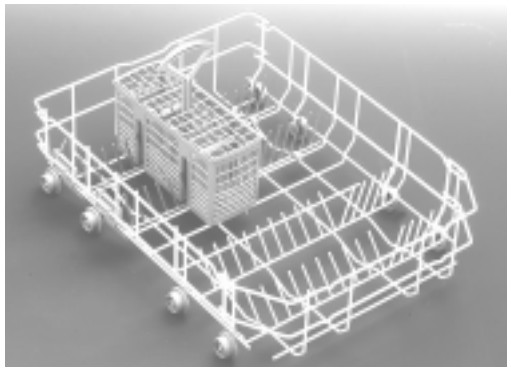

Plate holders:

- May be lowered to increase available space.

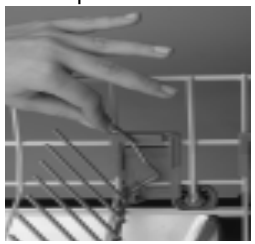

Cutlery basket:

- The cutlery basket can be removed to increase available space.

How to use the dishwasher

1. After loading the dishwasher, turn on the water supply tap.
2. Press the On/Off button and select the desired programme by pressing the corresponding button.
3. Close the dishwasher door: the wash programme will start automatically.
4. To interrupt the selected program (Reset), open the door (caution: danger of scalding from steam!) and hold down the “Intensive” and “Bio Normal” programme buttons. Close the door and wait until the water is drained (approx. 1 minute). Press the On/Off button again and select the new programme. When the dishwasher door is closed, the wash programme will start automatically.
5. Only open the dishwasher door if strictly necessary during a wash cycle and exercise maximum caution. Danger of scalding from steam.
6. To indicate the end of a programme, the “End” light on the progress indicator lights up and an acoustic signal is activated (if fitted).
7. Wait until the “End” light turns on before opening the door and turning the dishwasher off by pressing the On/Off button (caution: beware of hot steam). All the indicator lamps switch off.
8. Unload the lower rack before the upper one. Close the water tap.

Please read the User instructions carefully.

for IKEA® from Whirlpool®

Troubleshooting Guide

Tips and advice - Important

- Arrange crockery so that items do not touch each other. Arrange large crockery in the lower rack and smaller crockery in the upper rack.
- Load cups at an angle to facilitate water drainage.
- Generally speaking, place cutlery in the basket with the handles positioned downwards, but ensure that any sharp knives and forks that might cause injury are placed in the basket with the handles positioned upwards.
- Fill the detergent dispenser and check the salt and rinse aid level.
- Do not use the appliance for items not suitable for washing in a dishwasher, for example: wooden items, aluminium, plastic utensils, tin, hand-decorated crockery (unglazed), silver cutlery.
- Do not put liquid fat in the dishwasher (e.g. oil used for frying) or candle wax.
- Before starting a wash programme, make sure that the spray arms can turn freely and are not impeded by crockery or cutlery.
- If regeneration salt is to be added, **immediately** start a wash programme in order to eliminate any residual salt (rinsing alone is not sufficient).
- Sometimes even though the regeneration salt container has been filled, the corresponding indicator lamp (if fitted) will light up during the first wash cycle after filling with salt.

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem:

The dishwasher is not working:

- Is the plug properly inserted in the wall socket?
- Is there a power failure?
- Is the dishwasher switched on?
- Has the delayed start timer been set (if fitted)?
- Is the water supply tap on?
- Is the flow of water obstructed by impurities? If so, close the water supply tap, detach the water hose and clean the filter. Then re-connect the water hose to the tap and open the water tap once again.
- Are the filters clogged? (See “Care and maintenance” chapter in the user instructions).
- Is the door closed properly?
- Is a fault indicated? Restart the programme from the beginning (see point 4 in the section “How to use the dishwasher”).

Crockery still dirty after washing:

- Was the crockery loaded properly?
- Crockery must be loaded facing downwards; this is important, especially for large items of crockery.
- The water jets must spray the entire surface of all items.
- Make sure that crockery and cutlery are arranged properly.
- Have you selected the correct programme?
- Did you use too much or too little detergent? (The use of poor quality detergents may result in less effective washing).
- Are the filters clogged or incorrectly assembled? (See “Care and Maintenance” chapter in the user instructions).
- Are the spray arms blocked or the nozzles clogged? (See “Care and Maintenance” chapter in the user instructions).
- Is the lower spray arm correctly fitted?
- Is the salt container cap (water softening system) screwed down?

Marked crockery:

- Is the water hardness level selector not properly adjusted? (See “Filling the salt container” in the user instructions).
- Is the salt container empty? (See “Filling the salt container” in the user instructions).
- Was insufficient detergent used? (See “Filling the detergent dispenser” in the user instructions).

Marked glasses and cutlery:

- Was too much rinse aid used? (See “Filling the rinse aid dispenser” in the user instructions).

AFTER-SALES SERVICE

If after carrying out the above checks the malfunction persists or appears again, turn the appliance off and turn off the water supply tap, then call our After-Sales Service (see guarantee).
Please specify:

- The nature of the fault.
- The appliance type and model.
- The service code (the number after the word Service on the adhesive rating plate) inside the door on the right-hand side.

- Your full address and telephone number.

for
IKEA®
from
Whirlpool®

Dishwasher loading instructions:

UPPER RACK

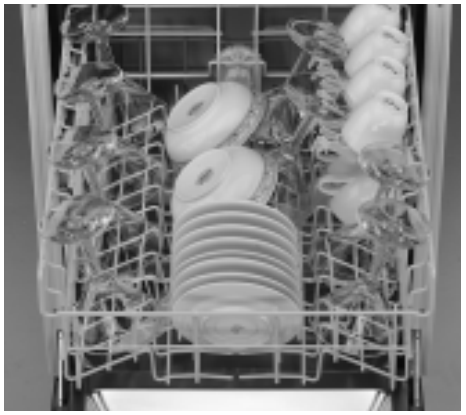

LOWER RACK

Depending on the model, rack features may vary (see "Upper and lower rack" description).